



### E262 SHOWER DOOR ONGOING MAINTENANCE AND CHECKS

- Inspect and adjust shower door hardware quarterly.
- Ensure all floor guides and wall bumpers are present and secured. Immediately replace any missing guide or stopper hardware.

### PROCEDURE

1. Moving components may shift out of alignment and require regular maintenance.
  - a. Confirm that the glass door is vertical and operates smoothly.
  - b. Check for sagging that could cause rubbing against the floor guide. The bottom of the shower doors should be at least 1/8" above any conflicts on the curb or guides.



- c. If the glass is not vertical and rubs against the floor guide, adjust with a screwdriver:
- The height adjustment screws are beneath the upper wheel.
  - Raise or lower the glass until vertical and operating properly and clear of conflicts.

